



JL FLOORING INSTALLATION INSTRUCTIONS & WARRANTIES

Asteroids - LVP, Stone & LVP Glue

Any wheel chairs or electric scooters need to be glue down LVP, no click type.

Not responsible for tenants dragging Appliances on floor for scratches or damage by tenants.

We want customers be happy with JL Flooring and know that JL Flooring stand by our products for warranties. We manufacture our own LVP to keep cost down.

Tools Required

- Utility Knife
- Straight Edge
- Tape Measure
- Spacers
- Do not use foam Underlay under JL vinyl flooring.

Before Installation

Material

- Check all material for the correct color, design, and size.
- Check all material to ensure the correct quantity is available to complete the job.
- Complaints in regards to visible defects will not be accepted once the flooring is installed. JL Flooring will help with the matter if it's not a lot.
- All material should be acclimated to the installed environment.
- ✓ Remove all boxes from pallets and separate from one another.
- ✓ Store the UNOPENED boxes in a dry environment for several days at the installation area. This allows the flooring to adjust to the room temperature.
- ✓ Stack squarely, no more than 10 cartons high.
- ✓ Do not store or turn on edges.
- ✓ Do not stack directly on concrete.

Jobsite

- Maintain all flooring material between 65°F (19°C) and 85°F (30°C) for at least 48 hours before, during and after installation.
- The minimum temperature of the sub-floor should not be under 50°F(10°C).
- The relative humidity inside the room should be between 35% and 55%.
- To ensure proper conditioning, all flooring must be stored flat and kept away from direct sunlight.

Sub-Floors

- For a successful installation, proper preparation of the sub-floor is necessary.
- The finished appearance and performance of the flooring will be determined and affected, partially, by the condition of the sub-floor.
- Sub-floor should be rigid, finished smoothly, flat, level, clean and dust free.
- Adequate attention to this detail will prevent ridging and tunneling, bumps caused from dirt or other textures, discoloration from residual adhesives, nails or other fastening devices and/or improperly used Underlay panels, alkali deposits, mold and mildew.

JL Flooring stand by our products for warranties!



JL FLOORING INSTALLATION INSTRUCTIONS & WARRANTIES

Asteroids - LVP, Stone & LVP Glue

Any wheel chairs or electric scooters need to be glue down LVP, no click type.

Not responsible for tenants dragging Appliances on floor for scratches or damage by tenants.

Underlay

- Wood Underlay panels should be dimension stable.
- Wood panels should be smooth and fully sanded so the grain or texture will not show through.
- Wood panels should be resistant to both static and impact indentation.
- Wood panels should be uniformed in density, porosity and thickness.
- Underlay panels should be free from any surface components that may cause staining such as plastic fillers, marking inks, sealers, etc.

Substrate Preparation


- All substrates must be dry, clean, smooth, level, and free from all existing adhesive residues, and free from movement.
- The substrate must be level within 3/16" in 10 ft. (4.7 mm in 3m).
- Fill and level all plywood seams and concrete cracks, construction joints, control joints, depressions, grooves or other irregularities.
- Sweep and /or vacuum substrate to remove all dust and debris.

Rigid Core Luxury Vinyl Flooring Installation


General Instructions

Preparing the floor: For best results, installation must be performed on a stable, flat, dry and dust free clean surface. Subfloor flatness tolerance is in over: 10 ft and should not slope more than 1 per 6 in any direction. Cabinetry should be installed first, then the flooring.

Color Variations: Slight shade variations may occur during manufacturing. For best results, it is recommended to mix several cartons to properly blend the shade.

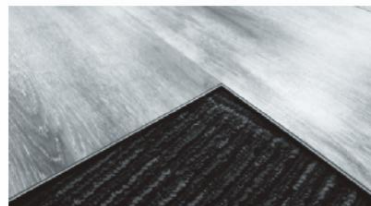


Installation Kit

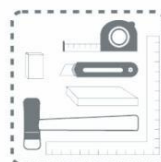

Recommended tools for installation:
 1. Tape measure
 2. Square
 3. Utility knife
 4. Tapping block
 5. Soft faced hammer
 6. 6 in spacers

Rigid Core Luxury Vinyl Flooring

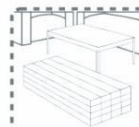

Product should be stored horizontally in a dry area away from direct sunlight. Do not leave next to heat or cooling ducts.


Start installation in a corner of the room, with tongue facing the wall, working from left to right. Leave an expansion gap of 1/8" (6mm) around room perimeter and vertical objects.




When laying the first row, click the short side of the plank into the previous row and press it by hand. Then use a soft faced hammer and tap to lock completely. Continue to complete the starter row maintaining a straight edge for the following row.




When laying the second row, insert the tongue into the groove on the long edge, holding the back edge slightly up.

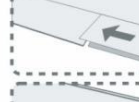

Slide the plank up to the short end of the previous plank.

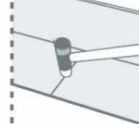

Then drop and lock. Use a soft faced hammer on the short end to ensure a complete lock. Use a tapping block and soft faced hammer on long ends.

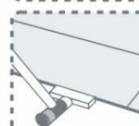

Maintenance

JL Flooring stand by our products for warranties!



JL FLOORING INSTALLATION INSTRUCTIONS & WARRANTIES

Asteroids - LVP, Stone & LVP Glue

Any wheel chairs or electric scooters need to be glue down LVP, no click type.

Not responsible for tenants dragging Appliances on floor for scratches or damage by tenants.

Please follow the recommendations in this guide to retain the fresh look and protect the finishing.

After installing the floor, we recommend a first cleaning to remove loose dirt or debris that may have been introduced during the installation process.

In order to protect the flooring surface from abrasive dirt and debris, we recommend installing an effective barrier system to limit the amount of moisture, dirt and grit that may enter the flooring area.

Please check any new cleaning agents on a small test patch of the floor in an inconspicuous area, and avoid using harsh cleaners or ammonia-based cleaning products.

1. Sweep and vacuum the floor surface to ensure removal of all loose dust, dirt, and debris. Using a mop scrub the flooring surface. Use warm, clean water, ring several times or as needed, then use a dry mop or wet vacuum to remove the water and allow to dry.
2. Do not allow pets with un-clipped nails to damage your vinyl flooring. It may result in severe scratching to the surface. The same is true for any high -heeled shoes that do not have proper tips on the heels.
3. Avoid exposure to direct sunlight for prolonged periods of time. During peak sunlight hours, use drapes or blinds to minimize the direct sunlight effect on the vinyl flooring. In addition, excessive temperatures are not good for resilient floors. Some natural ventilation or intermittent air conditioning in vacant homes should be considered. Long term continuous inside temperatures over 95F combined with strong direct sunlight will damage the flooring and cause installation problem.
4. Do not wax your vinyl flooring. The surface of your floor is very dense and nonporous, which prevents wax from penetrating and thus builds up a bed for yellowing and dirt collection. The same non -porous feature also provides all the protection against wear and staining that you will need.
5. JL vinyl Flooring is waterproof. Quickly remove the surface water is still recommended. The relative humidity inside the room should be between 35% and 55%.
6. A dehumidifier should be promptly turned on in the room to reduce the moisture levels back to normal. Do not dry the room below the normal moisture level that existed previously.

Additional Note

- JL Flooring is not responsible for humidity levels in homes, apartments.
- JL Flooring is not responsible for contractors that buy flooring and do their own installation. Only on JL Flooring installation, we will repair anything that JL



JL FLOORING INSTALLATION INSTRUCTIONS & WARRANTIES

Asteroids - LVP, Stone & LVP Glue

Any wheel chairs or electric scooters need to be glue down LVP, no click type.

Not responsible for tenants dragging Appliances on floor for scratches or damage by tenants.

Flooring installed that is on products

- JL Flooring not responsible for sub-floors and humidity levels after install is completed
- Cash buyers no install is responsible for warranties and also not putting in any damage click pieces and making sure floor is prepared property. JL Flooring is not responsible on cash and carry products that we don't install.
- If floors need new sub-floor, JL Flooring is not responsible for popping of LVP, if customer refuses new sub-floor cost. We can't honor but will try to fix floor. If we install new sub floor, we honor all warranties.